
INSTALLATION INSTRUCTIONS



HET06A-R

-R WARNING

Preset In-Wall Countdown Timer

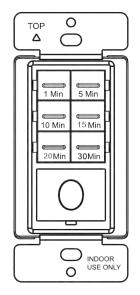

SPECIFICATIONS

Voltage	120VAC, 60HZ
Load(Single Pole Circuit)	
Incandescent Lamp	800W
Fluorescent Lamp	
Motor	1/4 HP
Time Delay	1, 5, 10, 15, 20, & 30 Minutes
Humidity	95% RH, non-condensing
Operating Temperature	32° to 131° F (0° to 55° C)

DESCRIPTION

The HET06A-R is a timer switch with 6 preset time buttons and 1 Manual ON button. All Loads connect to this timer will automatically turn OFF when the selected time expires. The 6 selectable times are 1, 5, 10, 15, 20, and 30 Minutes.

FEATURES

- · Easily replaces a standard single pole Light or Fan switch.
- · Compatible with most types of lights.
- · Very bright LED Night and indicator lights.
- Attractive blue LED indicators conveniently located next to each button.
- Indoor use only

Turn the POWER OFF at the circuit breaker before installing the Timer


Read and understand these instructions before installing. It is recommended that a qualified electrician performs this installation. Make sure to turn off the circuit breaker or fuse(s) and make sure power is off before wiring the device.


This device is intended for installation in accordance with the National Electric Code and local regulations.

Use Copper wires ONLY.

WIRING DIRECTIONS

- 1. Connect the BLACK wire on the switch to the HOT wire.
- 2. Connect the WHITE wire on the switch to the NEUTRAL wire.
- 3. Connect the RED wire on the switch to the LOAD wire.
- 4. Connect the GREEN wire on the switch to the GROUND wire.

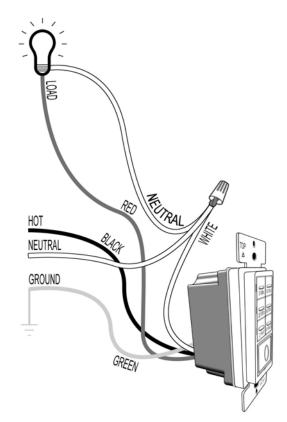

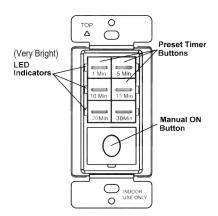

SETTING/OPERATING

Preset Buttons: The LED indicator next to the selected button will turn ON to indicate the selected time. There are 6 buttons with preset times of 1, 5, 10, 15, 20, and 30 Minutes.

- While the Load is OFF, press and release the button with the desired time once to turn the Load ON for that selected amount of time.
 - o When the time expires, the Load will automatically turn off.
- While the Load is ON, press and release the button with the desired time once to restart the countdown with the newly selected time.

Manual ON Button: The LED indicator is ON when the Load is OFF. The LED indicator is OFF when the Load is ON.

- While the Load is OFF, press and release the Manual ON button to turn the Load ON with the last selected timer preset.
- While the Load is ON, press and release the Manual ON button to override the timer and turn the Load OFF.
- To hold the Load ON: Press and hold the Manual ON button for 4 seconds. The Load will turn ON and stay ON. The timer WILL NOT turn the Load OFF.
 - o Press and release the Manual ON button to turn the Load OFF.
 - Press and release the button with the desired time once to keep the Load on for that selected amount of time.

WARRANTY INFORMATION

This device is warranted to be free of material and workmanship defects for 2 years from the date of purchase. Original receipt or proof of purchase from an authorized retailer must be presented upon warranty caim. ALL claims must be verified and approved by Enertiles, Inc. Warranties from other Enertilies products may vary. This warranty is nontransferable and does not cover normal wear and tear or any malfunction, failure, or defect resulting from misuse, abuse, neglect, alteration, modification, or improper installation. The fullest extent permitted by the applicable state law, Enertites shall not be liable to the purchaser or rod user customer of Enertites products for direct, indirect, incidental, or consequential damages even if Enertites has been advised of the possibility of such damages. Enertites' total liability under this or any other warranty, express or implied, is limited to repair, replacement or refund. Repair, replacement or refund are the sole and exclusive remedies for breach of warranty or any other legal theory.

3



© 2016 Enerlites Inc. CA, U.S.A. WWW.ENERLITES.COM 0208160041-02